



FX & FXT INSTRUCTIONS (INSTALLATION & USE)

BEFORE INSTALLATION

1 – BOX CONTENT (to be checked upon reception)

A: Standard Kit



Luff anti-twist rope (not included)

Thimble (option) Endless line drum

(FX+ only) (FX+)x 1 or (FXT) Таре (FX+ only)

+ 2 Types of attachments (top and bottom): depending on the furler model (FX+ ou FXT), the following attachments are included in the standard kit:



	Model	FX 900	FX 1500	FX 2500	FX/FXT 4500	FX/FXT 7000	FX 12000	FX 20000
	Bow shackle	x 1	x 1	x 1	x 1	x 1	x 1	x 1
	Snapshackle	x 1	x 1	x 1	x 1	x 1	-	-

B: Options


Bottom attachment


	Options / Models	ø and length depending on model	FX 900	FX 1500	FX 2500	FX/FXT 4500	FX/FXT 7000	FX 12000	FX 20000	
	Spliced furling loop	ø 6	x 12 m x 16 m	-	-	-	-	-	-	
		ø 8	-	x 16 m x 20 m	x 16 m x 20 m	-	-	-	-	
		ø 10	-	-	-	x 20 m x 26 m	x 32 m	-	-	
		ø 12-14	-	-	-	-	-	Length c	n request	
	Twin fairlead (rope hole ø 20)		TSL 25 (stanchions ø 25mm)							
			TSL 28 (stanchions ø 28 mm)							
9	Articulated fairlead		ASL 25/28 (stanchions ø 25 to 28mm)							
	Stainless steel thimble		-	FCI D08	FCI D12	FCI D16	-	-	-	
	Aluminium thimble		-	-	-	-	FC 20	FC 22	FC 24	
	Snatch block (pivoting carbon cheeks)		-	On request	SB2500	SB4500	SB7000	SB12000	SB20000	
	Slid sheaves Soft converting part for snapshackle		-	SSH1500	SSH2500	SSH4500	SSH7000	-	-	
)						SOFT4500				
Endless line drum cover		On request		PROTEC 2500	PROTEC 4500	PROTEC 7000	PROTEC 12000	PROTEC 20000		



2. PROTECT THE EDGE OF THE DRUM SHELL WITH TAPE (supplied in the kit)

- Fold the protection tape
in half and peel half of the paper strip (as shown)

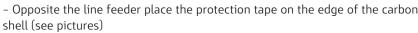

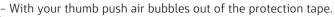


Cut the tape if too long.








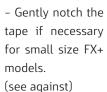


3. ORIENTATE THE FURLING LINE FEEDER (FX+)

- Notice the most appropriate orientation on board
- Fit temporary the snap shackle on the chain plate
- Orientate the line feeder in the right alignment (1)
- Check the alignment of the line extractor with the V groove (2)
- Tighten the set screw with the Allen key delivered (3).



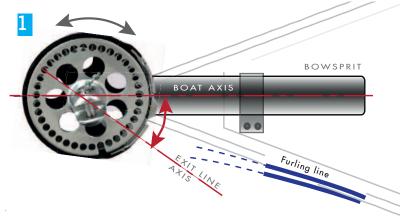

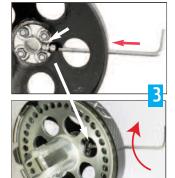


4. FIT THE TWO-TO-ONE BLOCK (OPTIONAL)







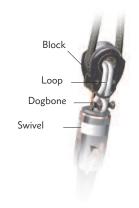

5. FIT THE SOLID SHEAVE (OPTIONAL)







Drum (FXT)

2/4

FURLING LINE INSTALLATION

6. FIT THE FURLING LINE ROUND THE DRUM:



7. SECURE/RELEASE THE MECHANISM PIN:








8. FIT FURLING LINE ON DECK AND ADVICES

Advices: - Prepare your equipment before sailing

- Your local marine professional can help you to fit the deck equipment for the furling line. The furling line needs to be correctly tighten and blocked if necessary (example of fitting on drawing below).

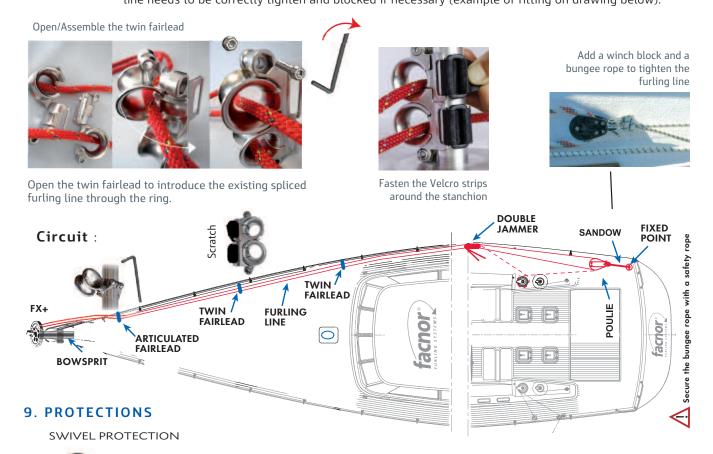



ENDLESS LINE DRUM COVER (OPTION)



Maintenance:
Do not use
solvent and rather
use clear water with
soap to clean the carbon shell.

Lay the sail on deck

Introduce the furling line into the drum

Fit the line on deck (see page 3)

Connect the mechanisms ("clicks!")

Attach on the bowsprit

Attach the halyard + protect the swivel

Make the halyard clear

Tighten the halyard

















2. HOISTING PRECAUTIONS

- Always anticipate the sail handling: start the handling conditions permitting and rigorously respect the sail use range specified by the sailmaker.
- Caution : the sail furls out very fast. Gloves recommended.
- Furl the sail out with the sheet secured round the winch. In light wind pull the furling line to unfurl.

3. BEFORE FURLING


- Tighten the anti-twist rope sufficiently enough;
- Reduce the pressure in the Gennaker by slightly sailing further downwind;


4. FURLING


- Check that the anti-twist rope is tight. If necessary sail slightly further downwind to reduce the pressure in the sail.
- Start furling by pulling the furling line and progressively releasing the sheet.




Tighten the anti-twist rope before furling

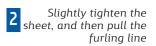

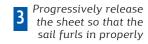

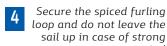

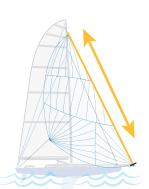









Always check if anything prevents the head of the sail from free furling.

5 - MAINTENANCE:

- Rinse the mechanisms after use.



Please do not hesitate to contact Facnor sales team (info@facnor.com) or agents if you have any queries: info@facnor.com

wind